


# E-SHOP SIMAF

## POSE MANUEL D'UN SERBOIS autotaraudeur TYPE TBH

A l'aide d'une clé 6 pans de dimension AK, visser l'insert dans le bois  
 D1= perçage de/à en fonction du bois  
 L=longueur mini du perçage

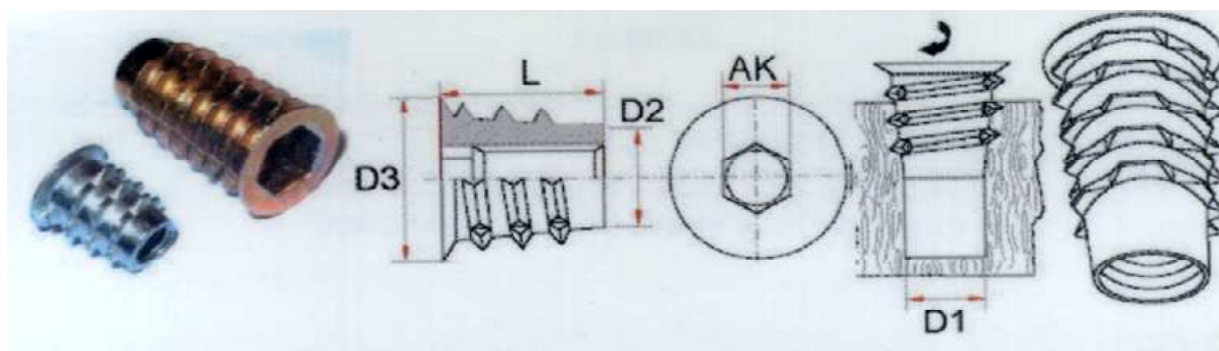

REFERENCE	PAS METRIQUE	LONGUEUR	D1	D2	D3	AK
	M	L				
41/TBH040H100	M4	10	5.7/6	5.5	8.5	4
41/TBH050H100	M5	10	7.7/8	6.5	11.5	5
41/TBH050H130	M5	13	7.7/8	6.5	11.5	5
41/TBH060H100	M6	10	8.7/9	7.5	12.5	6
41/TBH060H130	M6	13	8.7/9	7.5	12.5	6
41/TBH060H200	M6	20	8.7/9	7.5	12.5	6
41/TBH060H250	M6	25	8.7/9	8	12.5	6
41/TBH080H130	M8	13	10.7/11	9.5	14.5	8
41/TBH080H250	M8	25	10.7/11	9.5	14.5	8
41/TBH100H130	M10	13	12.2/12.25	11.5	16	10
41/TBH100H250	M10	25	12.2/12.25	11.5	16	10